

EAZY CARE WASH



EAZYCARE WASH is characterized by an extremely wear-resistant pile, that can resist up to 200 washes. For use in high traffic entrance areas.



Sizes:

60 cm × 85 cm, 85 cm × 150 cm
115 cm × 180 cm, 115 cm × 240 cm
75 cm × 85 cm, 85 cm × 115 cm
85 cm × 300 cm

115 cm × 200 cm, 115 cm × 250 cm
115 cm × 300 cm, 150 cm × 200 cm
150 cm × 240 cm, 150 cm × 250 cm
150 cm × 300 cm

Thickness: 8 mm
Weight: 2,3 kg/m²

Surface:

closed

Material:

100 % ECONYL® (regenerated polyamide) on 100 % nitrile-rubber backing

Fire behavior:

Cfl-s1 (EN 13501-1)

Characteristics


- EAZYCARE WASH withstands up to 200 washes in industrial washing machines
- due to its high quality, EAZYCARE WASH is often used in rental mat services
- due to its high dirt holding capacity and its oil resistance, it can be used for a wide range of applications, for example at gas stations and in the industry
- made of high-quality ECONYL® – flame retardant Cfl-s1
- special sizes are possible
- moisture beads off, helps reduce odor formation
- hard-wearing, non-slip and antistatic
- UV-resistant colors
- reinforced rubber edge (2,5 mm)
- 1,4 mm thick rubber back / 3 mm reinforced rubber back (recommendation when using rimless EAZYCARE WASH, e. g. for recesses)

Cleaning Instructions


For quick cleaning, shaking out or vacuuming is sufficient.

Daily cleaning is recommended in high-traffic areas; weekly in lower-traffic applications.

Eazycare Wash can only be industrially washed and dried.

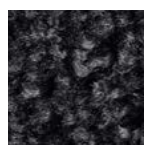


anthracite

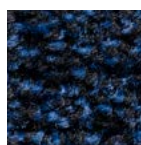

blue
*discontinued
item



gray

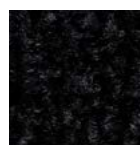

black

EASY CARE WASH



Laundrying instructions commercial laundering

- **Flush, 2-3 Min.** on a medium water level with a maximum temperature of 50°C
- **Flush (optional), 2-3 Min** on a medium water level with a maximum temperature of 50°C
- **Break, 2-3 Min.** on a high water level with a maximum temperature of 50°C
- **Rinse, 2 Min.** on a high water level with cold temperature
- **Rinse, 2 Min** on a high water level with cold temperature
- **Extract** on low speed, **1-2 Min.**
- **Shakeout** with the drum turning, **1 Min.**
- **Extract**, on a maximum of 250G, **3-5 Min.**
- **Dry (optional), 5-10 Min.** with a maximum basket temperature of 80 °C
- **Cooldown, 5 Min.**

Additional Recommendations

- For Heavy Soiled Mats, increase the temperature up to max. 70°C
- The break should not exceed pH of 9,5; use low pH non-ionic detergents
- Do not overdry mats; Basket-temperature of the dryer should not exceed 80°C
- If mats are not dried, the final rinse can be increased to 50°C. This will reduce moisture retention following extraction
- Lay mats flat following removal from washer; allow mats to cool before rolling
- Eazycare Wash mats can be washed together